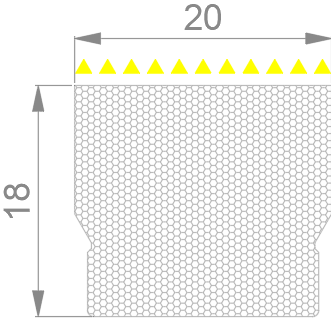


Installation Instructions

inter•lux


Flex HB W20*H18

Specification

Basic Info		Cross Section
Dimension	W0.79"*H0.71"	
Bending	Horizontal bending ONLY	
IP Grade	IP67	
Resistant	UV, Flame, Salt, Chlorine	
Input	24V DC	
Power	Refer to datasheet	
Max-Load	Refer to datasheet	
Cut-Unit	Refer to datasheet Or see cutting mark on neon	

Safety & Warnings

- Product should be installed in accordance with applicable national, state, and local building and electrical codes.
- It is recommended that luminaries are installed by qualified electrician. Always switch off power supply before installation, fitting or servicing.
- Please confirm polarity(+,-) before feed power. Please use qualified DC PSU.
- Do NOT attach with anything other than associated accessories, and do NOT cover the light or allow the light to be in contact with material such as cloth which may pose a fire hazard.
- No pressing on the Neon during storage, long-term pressing may cause damage.
- Ambient installation temperature and Storage Temperature: -40°F ~ 140°F.
- Ambient working temperature: -40°F ~ 122°F(Power<180W) , -40°F ~131°F (Power<120W) , -40°F ~140°F (Power<60W) .

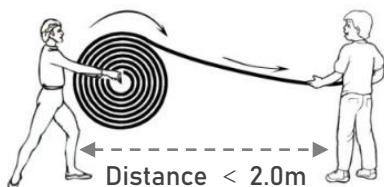


- At least two people to work together when unpacking, installing and etc.




Installation Cautions: Horizontal Bending ONLY

- ① **Horizontal Bending ONLY!**
- Bending Diameter $\phi \geq 11.81''$

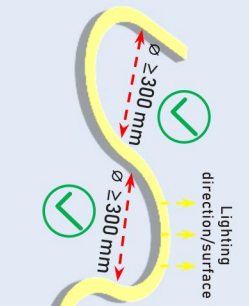

- ② **Vertical Bending FORBIDDEN!**

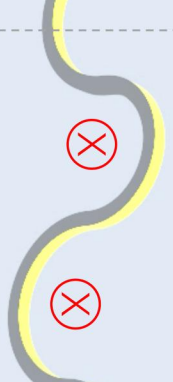

- ③ ● Max. twist angle is 180° per 39.37"




- ④ ● Angle bending FORBIDDEN!



- ⑤ ● Keep cable head in natural loose by 0.79" at least, and do NOT forcefully pull cable!



- ⑥ ● Power connector shall be installed outside the channel by 0.79".

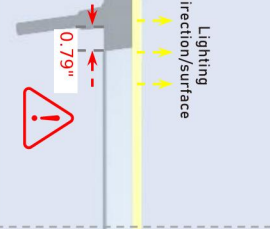

- ⑦ ● NO dual side push NEON, and do NOT let neon bow in middle.



- ⑧ ● Push NEON into channel by following the arrow directions gently and smoothly with angle less than 10°

