

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document



Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

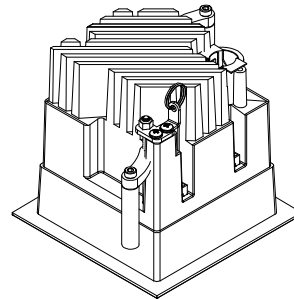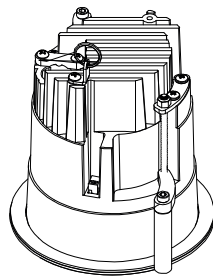

Step 1 - *Open the Box*


Unpack Luminaire unit. Unit ships in **two** major parts: Fixture Insert/Driver Box Assembly and Lens/Cover. Remote drivers and housings are supplied by Inter-lux. If Drivers are not supplied, then Plenum-rated cable with bare leads is provided. In this configuration, Integral Conduit and Driver Boxes are not included, but a Strain Relief is added to where the low voltage wires exit.

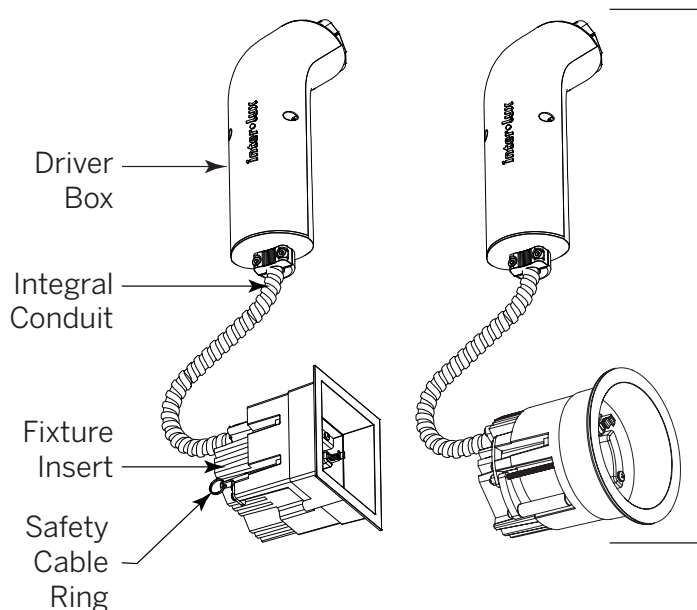


1

2

Fixture Insert/
Driver Box
Assembly

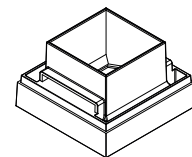

Cover/Lens

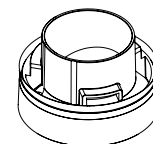

NOTE: Safety Cable not supplied with fixture.

Need
Help?

3" ProTools

WG-75RPTWW-RBT
WG-75SPTWW-RBT


Wall Wash

Round and Square
Recessed Bezel Trim

Step 2 - *Prep Ceiling*


- a** Cut appropriate size opening in the ceiling as shown at right.

Ceiling Thickness
Minimum: 0.05"
Maximum: 1.00"

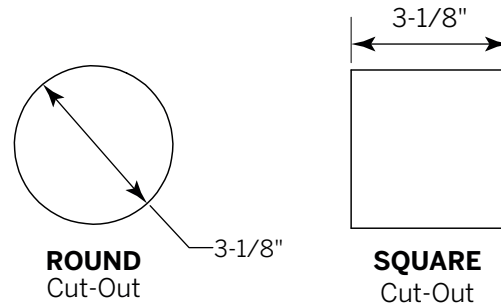


2/6

- b** Clear any insulation at least 3" from any part of the Fixture or Driver Box.

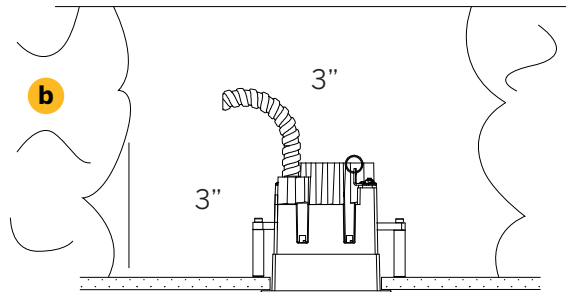


- c** Before Installation in dry location, remove supplied Gasket. For wet location, remove Paper Backing from Gasket and adhere Gasket to inside trim.

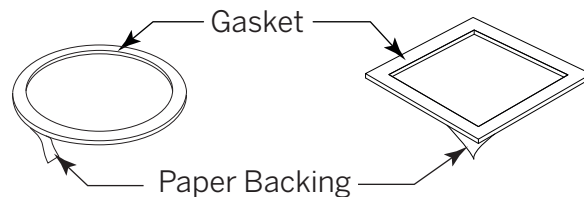

Step 3 - *Wire Driver Box to Incoming Power*

- a** Locate Fixture Insert/Driver Box assembly.
- b** Remove Driver Box Cover. Loosen Cable Strain Relief Bracket(s) and Hex Screws. Remove (unscrew) Knock-outs as necessary.

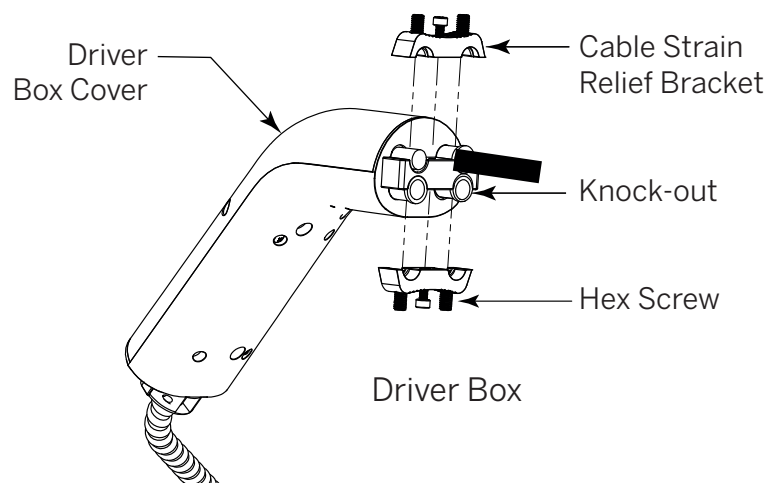

Need Help?

3" ProTools


WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash

Round and Square
Recessed Bezel Trim


Step 3 - **Wire Driver Box to Incoming Power** (continued)

Connect the Power Feed Cable to the Black (L), White (N) and Green (Gnd) Terminals. Connect the Control Wires, if applicable.

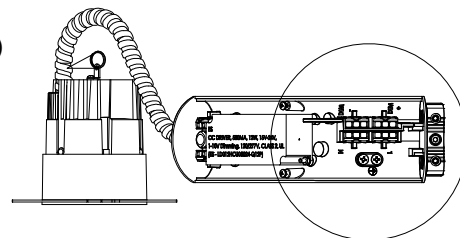

3/6


Driver Box Connected to **Conduit**

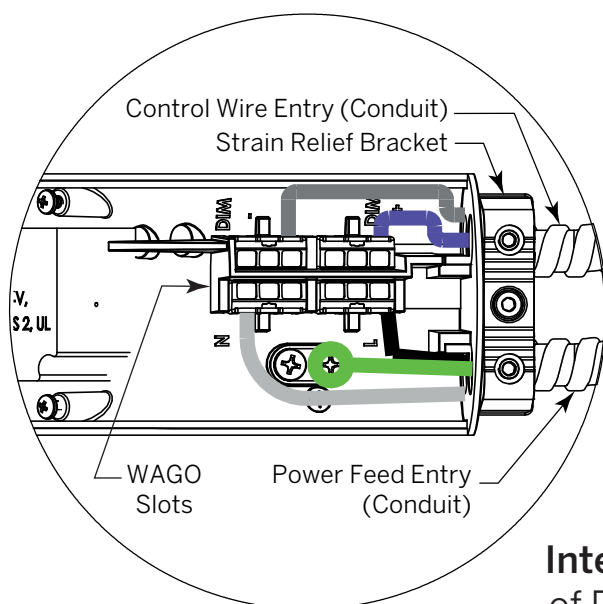

Interior View of Driver Box

Typical Trade Size ½ Conduit **cannot** enter driver box.
It is held in place by Strain Relief Bracket only.

Driver Box Connected to **Romex**

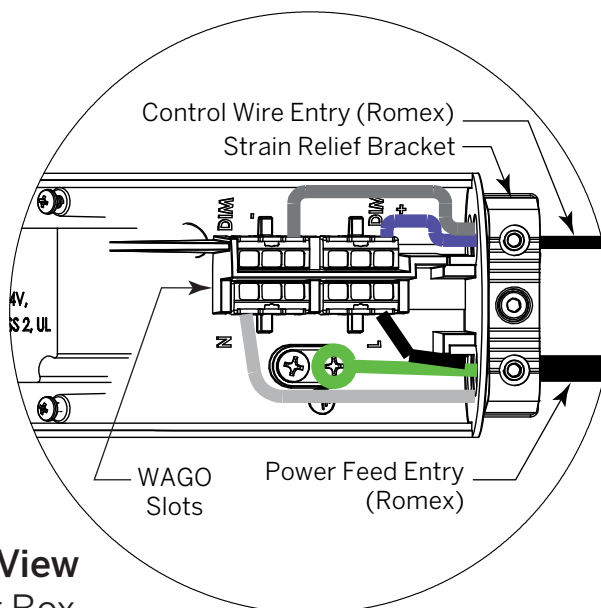

If Romex is used, fasten Set Screws to secure in addition to closing Strain Relief bracket.

Use 7/64" Allen key to fasten Set Screws.

Refer to Driver Wiring Instructions for other control protocols

Need
Help?


3" ProTools

WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash


Round and Square
Recessed Bezel Trim

Step 4 - Orient Fixture

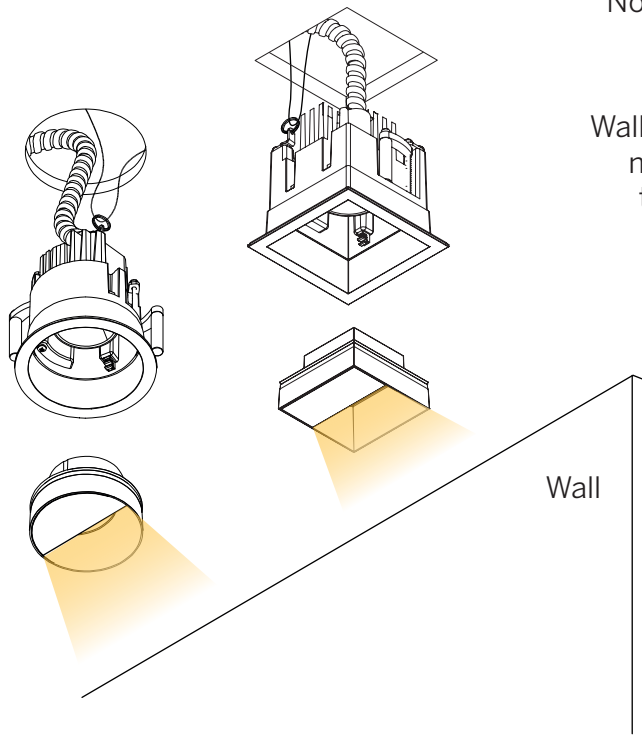

Note orientation of
Latches

Wall Wash Lens Cover
must be parallel
to wall surface

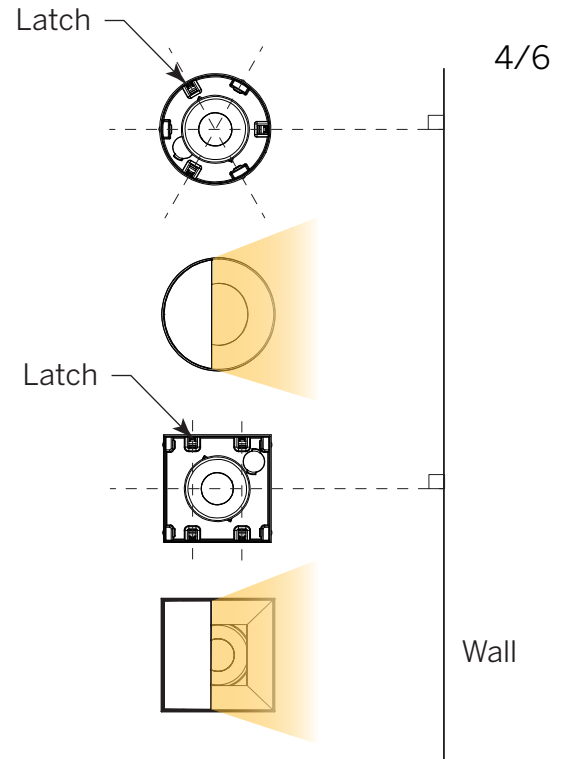


4/6


Step 5 - Mount Fixture

- a** Ensure that Wings are close to body
- b** Push Fixture Insert into hole.


IMPORTANT: Be careful not to
damage LED or Optic during
installation process.

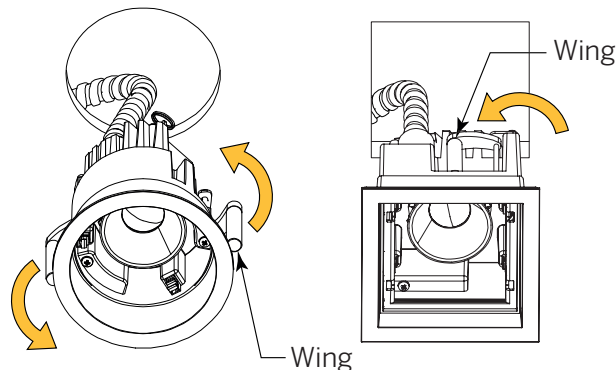


Ensure Wings are pressed
close to fixture body
as it passes through hole

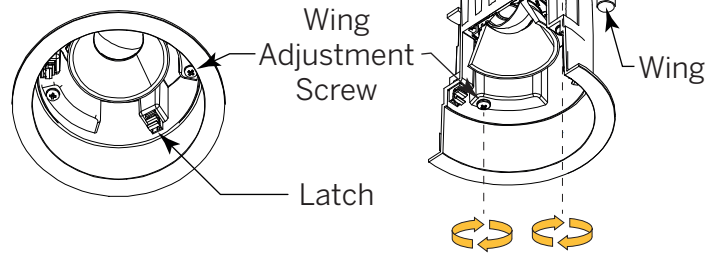

Fully inserted
into ceiling

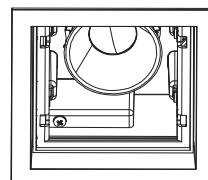

Other Wing
Adjustment Screw
not visible in
this view

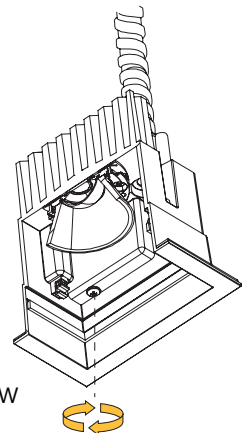

Need
Help?

3" ProTools


WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash

Round and Square
Recessed Bezel Trim

Step 5 - **Mount Fixture** (continued)

5/6




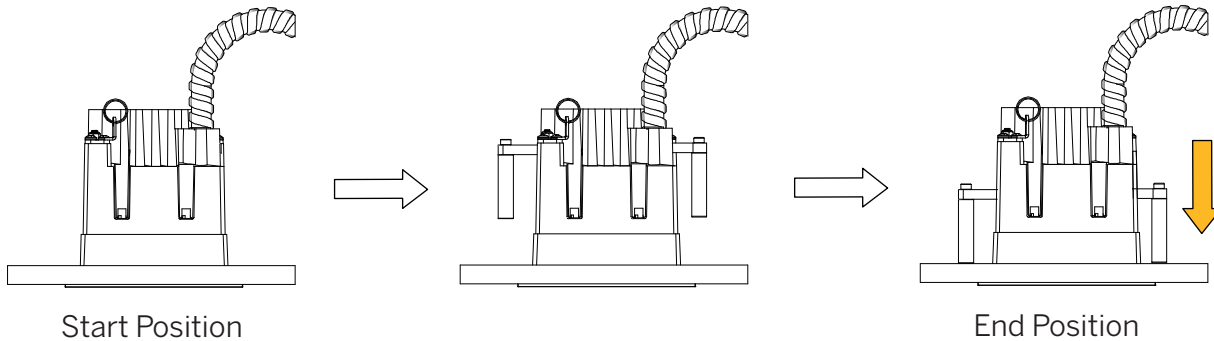


Turn Wing Adjustment Screws **clockwise** from below. Initial position shown at left. Wings are close to fixture body and raised to full height. As screws are turned, Wings swing out, lower, and clamp Fixture Insert to inside of ceiling, as shown at right.

IMPORTANT: Be careful not to damage LED or Optic during installation process.

Step 6 - **Insert Cover/Lens**

- a** Check to ensure **all** push latches are **OPEN** before inserting
- b** Orient slots in Cover/Lens with latch locations. Push up into Fixture Insert until a click is heard. Release, and Cover/Lens will be locked in place.

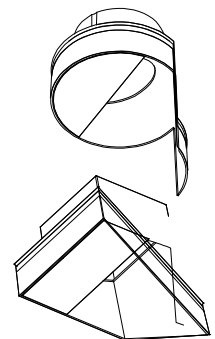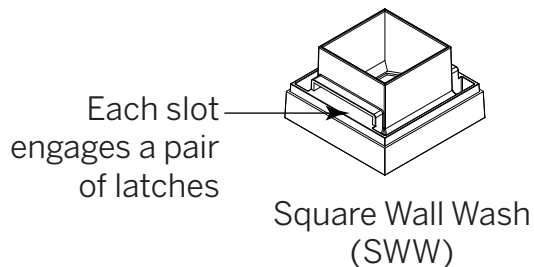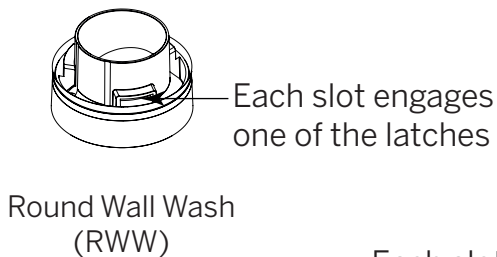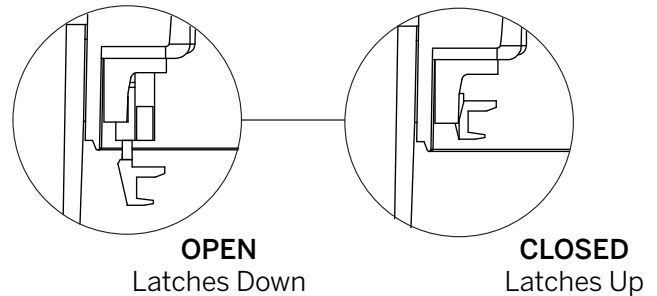

Bottom Views

Need
Help?

3" ProTools


WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash


Round and Square
Recessed Bezel Trim

6/6

Correct Seating for Round and Square Wall Wash Cover/Lenses

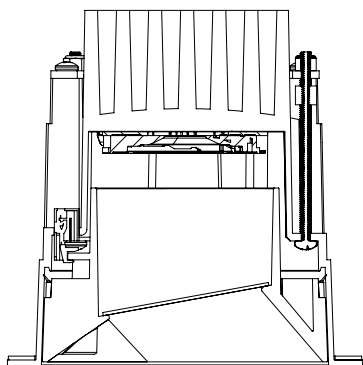

Round Wall Wash
(RWW)

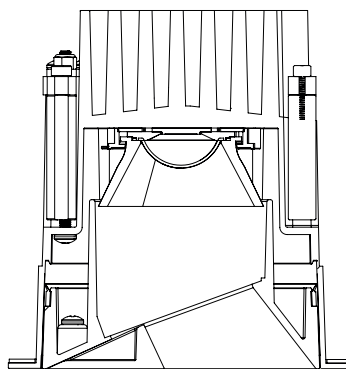

Square Wall Wash
(SWW)

Need
Help?