



G3.2 Exterior LED Channel

Installation and Maintenance Instructions

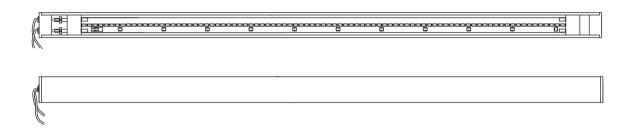

IMPORTANT: All wiring connections must be made before switching on mains power.

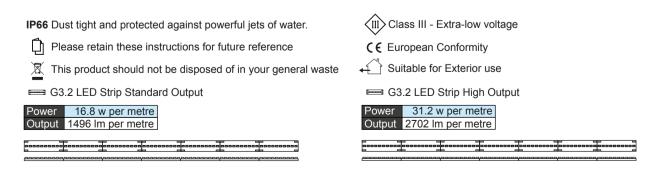



Electrical Supply

Installation must be carried out by a qualified electrician in accordance with BS 7671:2008 Wiring Regulations. 230/240V AC 50/60Hz mains supply to a suitable 24V SELV PSU.

Site conditions: LED equipment is more susceptible to static damage and overvoltage than previous technology. Before handling or connecting to the mains supply ensure that all MSL products are protected from static discharge and that the mains supply is to regulation. (230V +10 -6%)

Mains cables must be double insulated, strain relieved and separated from E.L.V output cables.

This unit requires a 24V constant voltage PSU.

Observe polarity:

Positive (+) is marked as RED. Incorrect supply or reverse polarity can cause irreparable damage.

All connections must be made before switching on mains. If the supply is energised prior to making the connections to the fitting then the resulting surge will damage the LED.

Multiple LEDs should be wired in series, refer to driver instructions for minimum/maximum load.

All lighting equipment is delicate and easily damaged through misuse or inappropriate installation (mechanical or electrical). Repairs and replacements may cause delays and will be chargeable. Contact MSL for support if required. For full warranty terms & conditions please visit our website.

The IP rating stated is applicable only when the fitting has been installed as per these instructions.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Dimming control circuit source must be of SELV insulation class.

Ensure supply PSU and connectors are housed indoors OR in a suitably IP rated enclosure.

Installation

Check that the mounting surface is flat and suitable for the installation of this fitting.

- Step 1 Attach LED channel using mounting tabs.

 Mounting tabs should be spaced evenly along the channel using approximately two per meter.
- Step 2 Connect mains supply to the PSU, connect dimmer (If required) and make E.L.V connections to the fitting.

WARNING: Do not look at exposed LED lamps in operation. Eye injury can result.


Cleaning:


Fully isolate the fitting and allow to cool.

Clean the fitting with a slightly damp lint free cloth from a mild solution of soap and water. The fitting must be completely dry before reconnecting power.

Incompatible or abrasive chemicals can damage the fitting, contact MSL for advice if required.



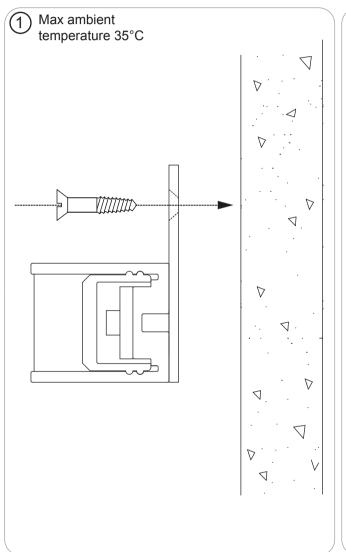

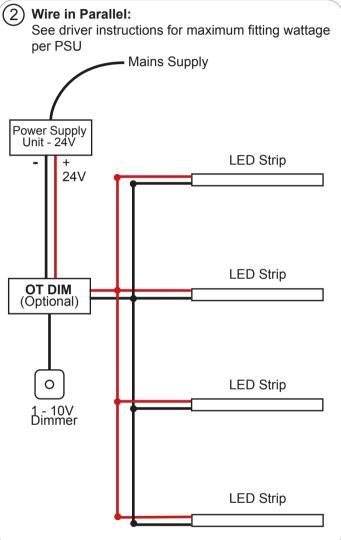




MOUNTING TAB ADJUSTMENT

The mounting tabs position can be adjusted by removing the supplied fixing on the back of the LED channel.

Once removed the tab can be rotated and moved to suit installation.

After adjustment, screw the tabs back on using the threaded slot in the back of the channel.

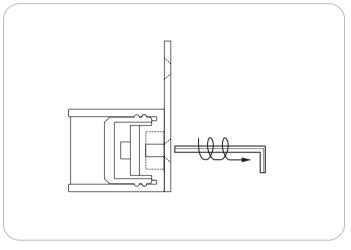

DO NOT OVER TIGHTEN TAB SCREWS

Use the Allen key as shown to be finger tight only

Over tightening the screws could result in irreparable damage.

