LED-FGI271-E

INSTALLATION INSTRUCTIONS




SAND / PETIT / PICROL



3741 Commerce Dr. #306-30 Baltimore, MD 21227 Phone (410) 381-1497 inter-lux.com




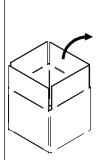







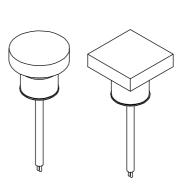







WARNING:

INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN

WARNING:

FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SEVERE INJURY.



WARNING:

READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE. SAVE INSTRUCTIONS FOR FUTURE USE.

Article	⊗ hole		
Sand (All)	№ 1.14"		
Petit IP20	∞ 0.59"		
Petit IP44	№ 1.14"		
Picrol 1"Ø	≈ 0.78"		
Picrol 1.2"Ø	Only with housing		

CAUTION:


THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.


CAUTION:


INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.


LOCATE AND REVIEW ANY CONTRUCTION PLANS AND INTER-LUX RECORD DRAWINGS FOR ALL FIXTURE RUNS. IT IS RECOMMENDED TO LOCARE AND LAY OUT ALL COMPONENTS FOR EACH FIXTURE "RUN". A FIXTURE RUN TIPICALLY CONSISTS OF JOINERS, LENGHTS OF HOUSING, AND ENDCAPS. BE SURE TO IDENTIFY ALL CORRECT LENGHTS FOR EACH FIXTURE RUN.


INSTALLATION INSTRUCTIONS

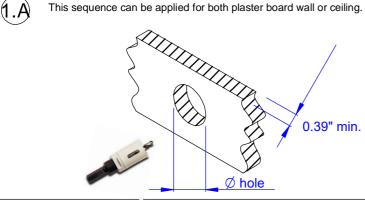


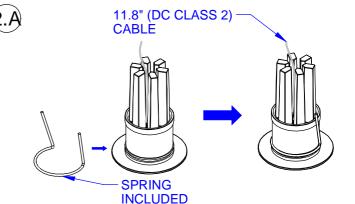

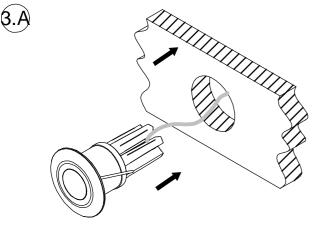

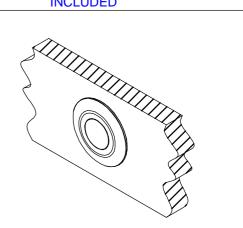


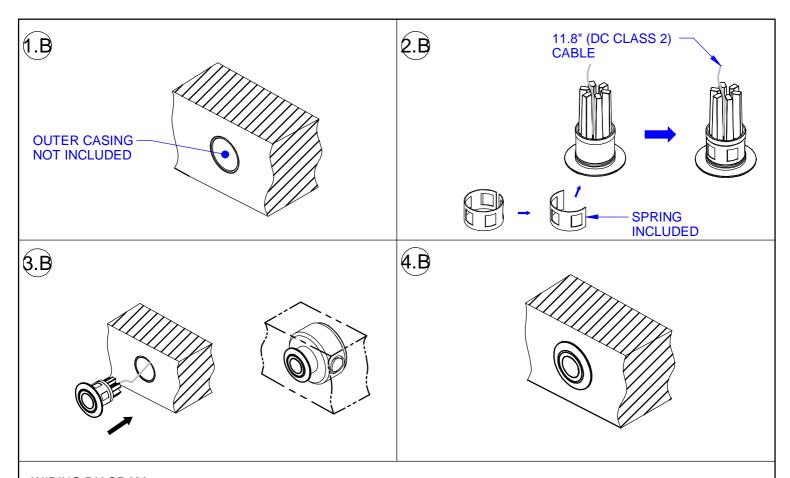

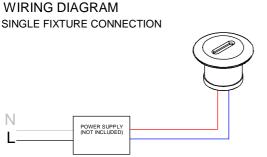

SAND/PETIT/PICROL Drive current level for each fixture: 1W fixture driven @ 350mA 1.5W fixture driven @ 500mA 2W fixture driven @ 630mA

MULTIPLE FIXTURES WIRED IN SERIES (Constant Current)

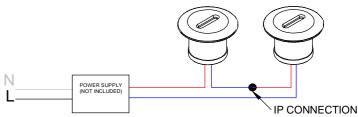

The number of fixtures on a single output will vary depending on the specific LED driver.

Refer to the specific wiring diagram on https://www.inter-lux.com/wiring-diagrams/and the Constant Current Fixtures per driver table.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

MOUNTING INSTRUCTIONS

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLING FIXTURES

- · CAUTION: USE ONLY WITH CLASS 2 POWER UNIT
- · Keep all of the instructions for future reference
- · Turn off power before installing fixture
- · Installation is to be performed by a qualified electrician only
- All installations must conform to the National Electrical Code as well as all local jurisdictional codes and regulations
- · Any modification of the luminaire will void any and all written or implied warranties
- The manufacture accepts no responsibility for damage to persons or property airing through improper use or installation

INSTALLATION SEQUENCE

- Mount remote driver in accessible well ventilated space
- Ensure power is off before connecting driver to line voltage
- Cut correct size opening in ceiling or wall [1.A] or install the outercasing [1.B]
- Fix the spring on the article [2.A-2.B]
- Insert the article into the hole [3.A-3.B]
- Connect secondary wiring to fixture wiring
- WARNING Be sure secondary wiring is connected to driver BEFORE energizing to avoid LED failure
- Energize

Secondary Cable Colors	Pole
Red wire	+
Blue wire	-

Constant Current Fixtures per Driver

	Constant Current Fixtures per Briver					
mA	W	Max. number of fixtures PER OUTPUT (fixtures wired in series)	Max. total fixtures per ECO30W driver (1x output/driver)	Max. total fixtures per SOLO50W driver (2x outputs/driver)	Max. total fixtures per SOLO100W driver (4x outputs/driver)	
180mA	7.0W	1	1	2	4	
200mA	7.5W	1	1	2	4	
220mA		10	10	20		
	0.6W				40	
220mA	0.7W	10	10	20	40	
220mA	1.9W	5	5	10	20	
220mA	8.0W	1	1	2	4	
220mA	9.0W	1	1	2	4	
250mA	3.0W	3	3	6	12	
300mA	12.0W	1	1	2	4	
350mA	1.0W	10	10	20	40	
350mA	1.5W	10	10	20	40	
350mA	3.0W	5	5	10	20	
350mA	4.0W	3	3	6	12	
350mA	4.2W	3	3	6	12	
350mA	12.0W	1	1	2	4	
		1	1	2	4	
350mA	13.0W					
400mA	15.0W	1	1	2	4	
450mA	16.0W	1	1	2	4	
500mA	1.5W	10	10	20	40	
500mA	4.5W	4	4	8	16	
500mA	6.0W	3	3	6	12	
500mA	6.5W	3	3	4	8	
500mA	9.0W	2	2	4	8	
500mA	13.0W	1	1	2	4	
500mA	14.0W	1	1	2	4	
500mA	18.0W	1	1	2	4	
500mA	20.0W	1	1	2	4	
570mA	63.0W	_	-	-	1	
580mA	20.0W	1	1	2	4	
630mA	2.0W	10	10	16	32	
630mA	2.0W	10	10	16	32	
630mA	4.0W	6	6	10	20	
630mA	6.0W	3	3	6	12	
630mA	7.0W	3	3	4	8	
630mA	7.2W	3	3	4	8	
630mA	7.5W	3	3	4	8	
630mA	8.0W		3	4	8	
		3				
630mA	9.0W	2	2	4	8	
630mA	12.0W	2	2	2	4	
630mA	18.0W	1	1	2	4	
630mA	23.0W	1	1	1	3	
630mA	24.0W	1	1	1	3	
660mA	45.0W	_	-	_	1	
700mA	2.0W	10	10	16	32	
700mA	6.3W	3	3	6	12	
700mA	6.5W	3	3	4	8	
700mA	8.0W	3	3	4	8	
700mA	13.0W	1	1	2	4	
700mA	21.0W	1	1	1	3	
700mA	24.0W	1	1	1	3	
700mA	25.0W	-		1	3	
			-			
800mA	10.0W	2	2	2	4	
840mA	30.0W	-	-	1	2	
850mA	60.0W	-	-	-	1	
900mA	33.0W	-	-	1	2	
900mA	40.0W	-	-	1	2	
900mA	42.0W	-	-	1	2	
950mA	34.0W	-	-	1	2	
950mA	35.0W	-	-	1	2	
1050mA	48.0W	-	-	-	1	
1250mA	45.0W	-	-	-	1	
1250mA	46.0W	-	-	-	1	
1300mA	46.0W	-	-	-	1	
1850mA	54.0W	-	-	<u>-</u>	1	
. 300.181	2				· · · · · · · · · · · · · · · · · · ·	

Consult factory for any combination not listed above.